

VF-16 Owner's Manual Supplement


The way to replace the hard disk, which is mentioned in the page 22 - 23 of the VF-16 owner's manual has been changed. Referring to the following description, replace the hard disk correctly. Also refer to the <Warning> and <Precautions> mentioned in the page 22 of the VF-16 owner's manual.

<Caution>

When replacing the hard disk, do not forget to turn off the power of the VF-16 and unplug the power plug from the electric outlet. If the machine was used right before the hard disk replacement, the hard disk body remains hot. In order not to suffer burns, replace the hard disk after it is cooled down.


1 Unscrew the four screws fixing the panel to the bottom of the VF-16 main unit.

If the panel is removed, the hard disk covered with a cushion can be seen.

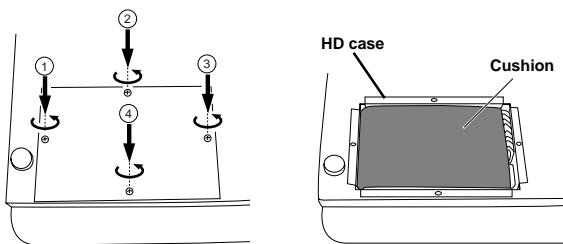


2 Take out the hard disk to the direction "2" indicated in the drawing below.


Slightly lifting up the cushion upward helps you take out the hard disk easily. When taking it out, do not apply excessive force.

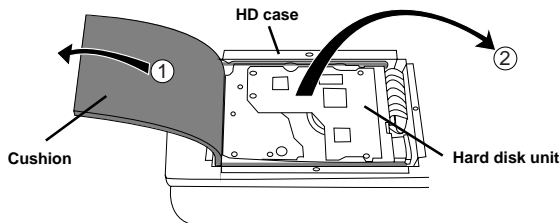

3 Hold the connector section and gently pull out the two cable connectors from the hard disk.

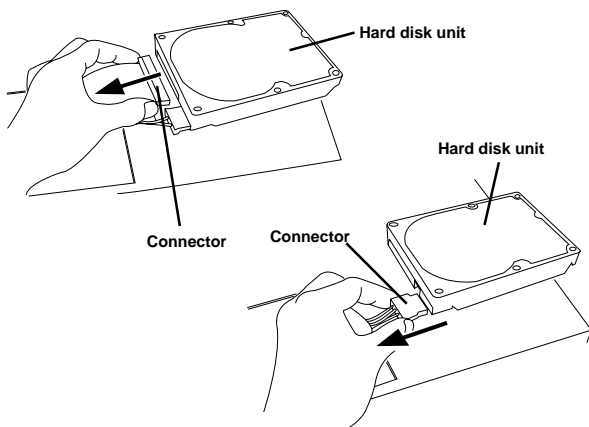


4 Prepare a new hard disk and Connect the two cable connectors to it with holding the connector section.

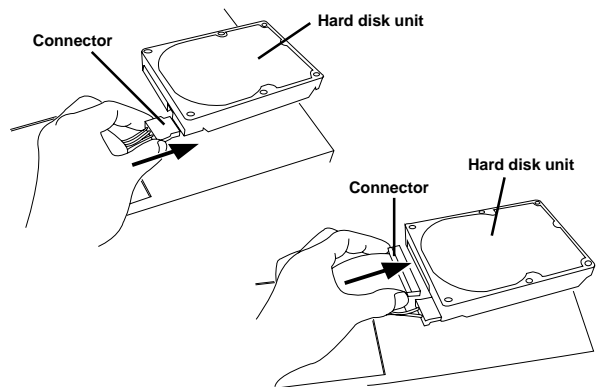

5 Put back the new hard disk into the VF-16 main unit.

In the reverse order of taking out the hard disk as performed earlier, carefully house the hard disk at the bottom of the main unit and cover it with the cushion.

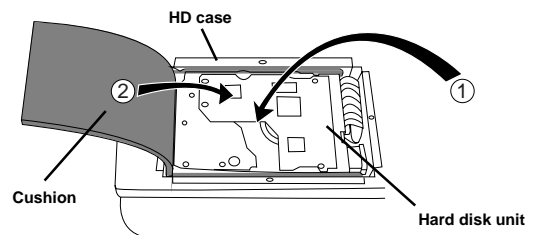

6 After checking that the cables, etc. are not sticking out from the main unit, put the panel onto the hard disk and the case.

Align the position of screw holes on the panel / case with the VF-16 bottom panel screw holes and fix the panel / case using the four screws to the VF-16 main unit.

When the hard disk replacement is successfully completed, go to the page 24 and format the newly installed hard disk.