


FR-2 Software Update Procedures

1. Prepare a Compact Flash (CF) card used on FR-2.
2. Copy the software file (e.g. fr02_mv1.03) to the CF card root directory by either the following method.
 - 1) Insert the CF card into a CF card reader / writer connected to your PC (Windows 98SE, ME, 2000 or XP) USB port.
 - 2) Put FR-2 into the USB mode. Then, connect FR-2 to PC (Windows ME, 2000 or XP) USB port using USB cable.
3. Power OFF FR-2 (if it is powered ON).
4. Insert the CF card into the FR-2 CF card slot.
5. While pulling the REC lever to the right, power on FR-2.

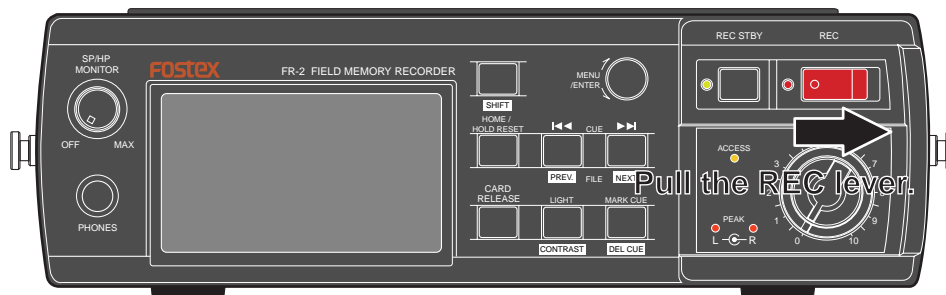

Until the following will appear on the LCD, keep on pulling the REC lever. The example below indicates that the current software V1.02 is going to be updated to V1.03.

```

ver 1.02 20/JAN/'04
-- Version Up --
      ↓
FR02 MV1.03
Are You Sure?
Yes>> ENTER Key
  
```

6. Press the MENU/ENTER knob to start updating the software. After about 20 seconds or so, “Completed!”, “4 digits checksum” and “Please wait!” messages appear on the LCD. Then, FR-2 automatically shuts off.
7. Confirm if the FR-2 software has been correctly updated to the latest one by “MENU -> SETUP -> Version” and pressing the MENU/ENTER key.

```

MENU▶Setup▶Version
<ROM Version>
ver 1.03 20/FEB/'04
  
```

8. Power on FR-2. Initialize the SETUP settings by “MENU -> Setup -> Init Setup” and pressing the MENU/ENTER knob (twice).

```

MENU▶Setup▶Init Setup
<Initialize Setup>

Initialize
Setup Settings!

Are you sure?
  
```